


REVISIONS

| ZONE | LTR | DESCRIPTION | DATE | APPROVED |
|------|-----|-------------|------|----------|
| | | | | |

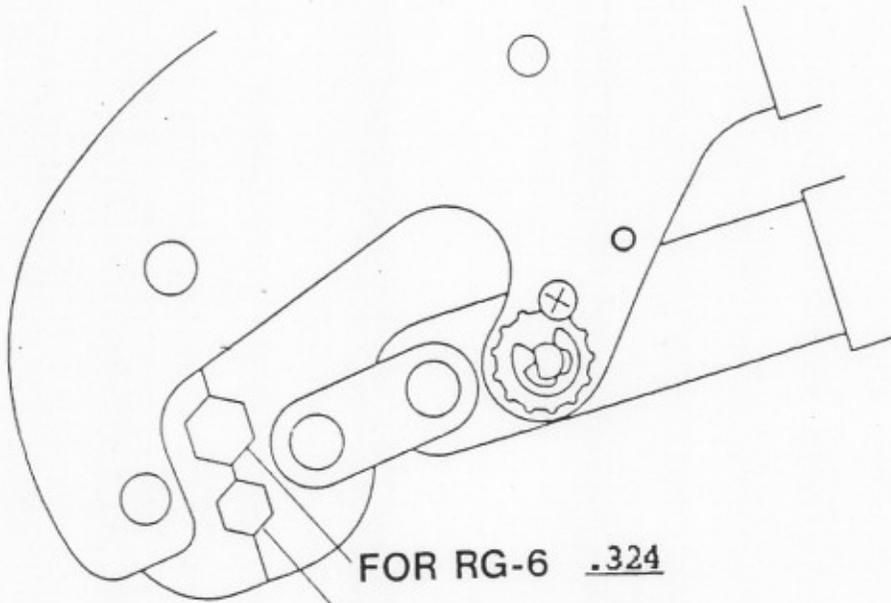

FOR RG-6 .324
 FOR RG-59 .251

Eccentric Pressure Adjustment Steps:

- a. Remove clip from adjustment ring.
- b. Lift adjustment ring above locking pin with a thin blade screwdriver.
- c. Rotate ring in either direction to broaden handle grip and improve grip pressure.

(Caution: Do Not Overadjust)

- d. Reset ring on locking pin and replace clip (insure that clip is properly secure on adjustment shaft; if too loose, close clip gap and reset on shaft.)

UNLESS OTHERWISE SPECIFIED
 ALL DIMENSIONS ARE IN INCHES
 TOLERANCES
 FRACTIONS ± ANGLES ±
 3 PLACE DECIMALS ±
 2 PLACE DECIMALS ±
 DIM. TOL. & SURFACE ROUGHNESS
 APPLY FINISH

AIM. ELECTRONICS CORP.

24-7710

PREPARED

SIZE
A

APPROVED