

PRO-ELEC



16" Pedestal Fan


Model: PEL01924 & PEL01925

Please read these instructions carefully before use and retain for future reference.

IMPORTANT SAFETY INFORMATION

- When using electrical appliances basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understands the hazards involved.
- Children shall not play with this appliance.
- Cleaning and maintenance shall not be made by children without supervision.
- There are no user-serviceable parts in this product. Refer servicing to qualified personnel.
- Do not operate this fan with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Ensure that the fan is switched off before removing the guard.
- Do not insert anything through the grille when the fan is in use.
- Make sure that the fan is on a stable surface when operating.
- It is recommended to unplug the fan from the mains socket when not in use.

ASSEMBLY

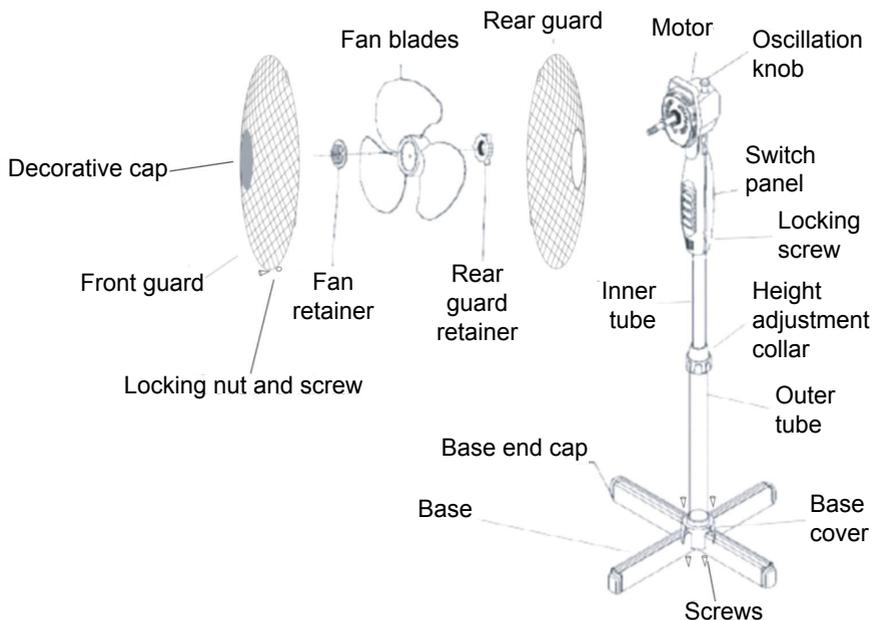

- Set the base on a level surface and insert the end caps then remove the four screws.
- Using these four screws, fix the stand outer tube to the base and securely tighten the screws.
- Temporarily remove the height adjustment collar then slide the base cover trim down the tube to cover the fixing with the base. Refit the adjustment collar.
- With the height adjustment collar loosened off, extend part of the inner tube. Re-tighten the height adjustment collar.
- Loosen the locking screw at the bottom of the switch/motor assembly and insert the inner tube of the stand into it and push home. Re-tighten the screw.
- Unscrew the rear guard retaining nut from the motor shaft.
- Fit the rear guard onto the body of the fan. Use the two pegs provided to align with the two holes in the rear guard.
- Lock into position by firmly tightening the rear guard retaining nut.
- Push the fan blades onto the motor shaft aligning the slots. Lock into position by firmly tightening the retaining ring.
- If not already attached, fit the decorative cap to the front guard using the screws supplied.
- Mount the Front Safety Grill onto the Rear Grill by hanging the top hook clip of front grille over the top of the Rear Grill. Close the clasps all around the grill, finally fit the nut and screw through the hole in the bottom edge of the front grill and tighten.

OPERATION

- Connect the mains plug to a suitable outlet.
- Select the desired speed using the speed control:
 - 0 = Device off
 - 1 = Low speed
 - 2 = Medium speed
 - 3 = High speed
- The inclination of the fan head can be adjusted by tilting it forwards and backwards. The fan head can then be locked into position, which is indicated by an audible click.
- Oscillation: to make the fan oscillate, push down the oscillation knob. To stop the fan head from oscillating, pull up the oscillation knob.
- To adjust the height, slacken the height adjustment collar and slide the upper section to the required height. Re-tighten the height adjustment collar.

CLEANING & STORAGE

- Before cleaning, turn the fan off and unplug from the power supply.
- Use a soft cloth to wipe off any dust. If the fan is very dirty, use a damp cloth and wipe dry.
- Do not use any chemicals, abrasives or solvents that could damage the fan.
- Store the fan in its original packaging in a ventilated dry area.
- The motor bearings are permanently sealed and do not require additional lubrication.

TECHNICAL SPECIFICATION

Power consumption	45W
Main voltage	220-240V~ 50Hz
Dimensions (HxWxD)	1250 x 600 x 600mm
Weight	2.3kg



INFORMATION ON WASTE DISPOSAL FOR CONSUMERS OF ELECTRICAL & ELECTRONIC EQUIPMENT.

When this product has reached the end of its life it must be treated as Waste Electrical & Electronic Equipment (WEEE). Any WEEE marked products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used. Contact your local authority for details of recycling schemes in your area.



Made in China. PR2 9PP

Man Rev 1.1