


PRO-ELEC

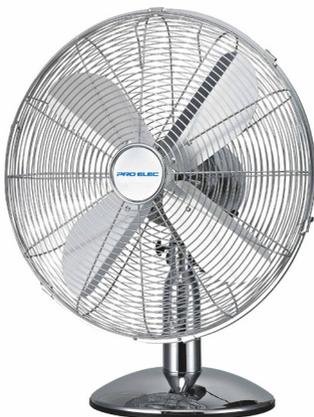

12" Desk Fan

Model: PEL00303

Please read these instructions carefully before use and retain for future reference.

IMPORTANT SAFETY INFORMATION

- When using electrical appliances basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understands the hazards involved.
- Children shall not play with this appliance.
- Cleaning and maintenance shall not be made by children without supervision.
- There are no user-serviceable parts in this product. Refer servicing to qualified personnel.
- Do not operate this fan with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Ensure that the fan is switched off before removing the guard.
- Do not insert anything through the grille when the fan is in use.
- Make sure that the fan is on a stable surface when operating.

ASSEMBLY

- Make sure the main fan body is secured tightly to the base with the thumbscrew under the base .
- Remove the four screws in the main body and reuse to attach the rear fan guard, ensuring the handle is at the top.
- Slide the fan onto the axle screw first and tighten the screw ensuring it is in contact with the flattened edge of the axle.
- Remove the bolt and nut from the bottom of the front guard and rotate all clips to an open position.
- Attach the front fan guard, lining up the top notch with the rear guard and ensuring the bolt hole is aligned for the two halves.
- Close the clips and replace the nut and bolt locking the two halves together.

OPERATION

- Connect the power plug to a suitable outlet.
- Oscillation: In order to make the fan oscillate, push down the oscillation knob. To stop the fan head from oscillating, pull up the oscillation knob.
- Select the desired speed using the speed control:
 - 0 = device off
 - 1 = Low speed
 - 2 = Medium speed
 - 3 = High speed

CLEANING & MAINTENANCE

- Before cleaning, switch the fan off and unplug from the power supply.
- To clean the fan, use a soft cloth to wipe off any dust. If the fan is very dirty, use a damp cloth and wipe dry.
- Do not use any chemicals, abrasives or solvents that could damage the fan.
- Store the fan in its original packaging in a dry, well ventilated area.
- The motor bearings are permanently sealed and do not require additional lubrication.

TECHNICAL SPECIFICATION

Power consumption	35W
Main voltage	220-240V~ 50Hz
Dimensions	340 x 240 x 420mm
Weight	3.0kg



INFORMATION ON WASTE DISPOSAL FOR CONSUMERS OF ELECTRICAL & ELECTRONIC EQUIPMENT.

When this product has reached the end of its life it must be treated as Waste Electrical & Electronic Equipment (WEEE). Any WEEE marked products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used. Contact your local authority for details of recycling schemes in your area.



Made in China. PR2 9PP

Man Rev 1.2